

Purpose

MOD UCBASEF sets the constant baseflow in the UNIT-HG Operation to the value entered at the beginning of the run if the date specified is during the run period.

This is a permanent change to the value stored in the Forecast Component parameter file.

Format

Use Format B3 with one date on the command card.

Forecast Group identifiers cannot be specified for this command.

```
.UCBASEF date  
identifier value [ / opname ]
```

where date is the date
value is the constant baseflow in units of flow (CMS or CFS)

Example

In this example the constant baseflow used in conjunction with API operations is changed for several segments.

```
.UCBASEF 1123  
RPDM5 400.  
RAPM5 1000.  
NULM5 400.
```