


Viewing Flood Inundation Mapping on the National Water Prediction Service

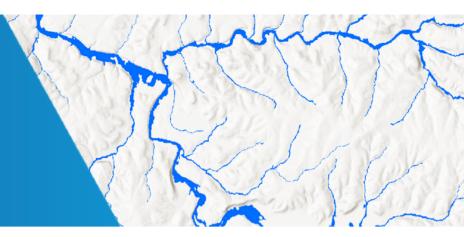

The National Weather Service (NWS) Flood Inundation Mapping (FIM) products are available on the National Water Prediction Service (NWPS) website for portions of the United States at https://water.noaa.gov. Note: Flood Inundation Layers are currently experimental products and are not available for all areas. Learn more here.

When "Flood Inundation" is enabled, users will see a list of viewing options. One of those being a drop down menu labeled "Guidance Options." The default guidance is "RFC Max Forecast," however, there are **5 total products** available as seen in Figure 1:

| 1 | |
|---|--|
| | |
| | |
| | |

| River Forecast | Center (RFC) |
|----------------|--------------|
| Max Forecast | |

- National Water Model (NWM) Latest Analysis
- NWM Max Forecast
- Puerto Rico/Virgin Islands (PR/VI) Latest Analysis

PR/VI Max Forecast

More details on these products can be found <u>here</u>.

| | | Î |
|--------------------------|-----------------------------|---|
| [∼] Flood Inund | ation 🗹 Enabled | |
| ▲ Services are expe | erimental More Information | |
| Guidance Options: | RFC Max Forecast* 🗸 📀 | |
| RIVER FLOW | RFC Max Forecast* | |
| Updated: Sep 13, 2024, | NWM Latest Analysis | |
| | NWM Max Forecast* Major | |
| | PR/VI Latest Analysis erate | |
| | PR/VI Max Forecast | |
| | Action | |
| LEVEE INFO | | |
| | Levee Wall | |
| | Embankment | |
| | Levee Protected Area | |
| AREA | | |
| | Coastal Modeling Zone | |
| INUNDATION CO | /ERAGE | |
| | 30% FIM Zone | |
| INUNDATION | | |
| Updated: Sep 13, 2024, | 12:50 PM CDT | |
| OPACITY 100% | | |
| | | |

Figure 1: Screenshot of the NWPS FIM Menu and Drop Down Guidance Options.

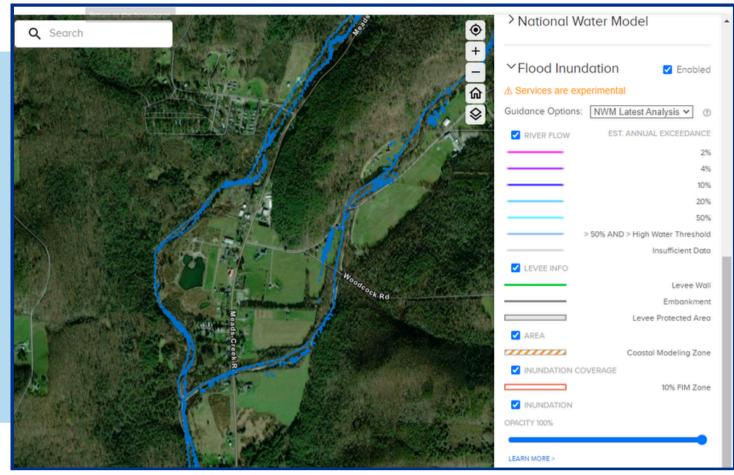


Figure 2: Screenshot of FIM extent on NWPS.

Displaying FIM from the NWPS Flood Inundation Menu:

Once the guidance option is selected, the user can choose to toggle off a number of FIM display options. To view the FIM, zoom in on a specified area of choice until the FIM extent begins to appear (Figure 2). Users may adjust opacity of the FIM extent using the slider at the bottom of the "Flood Inundation" menu.

- **River Flow:** Shows NWM Estimated Annual Exceedance Probability (AEP), indicating areas where the NWM streamflow forecast signals high water based on a <u>44-year retrospective simulation</u>.
- Levee Info: Displays levee walls, embankments, and protected areas as defined in the U.S. Army Corps of Engineers <u>National Levee Database</u>. Local levees are not shown.
- Area/Coastal Modeling Zone: Displays the 10-meter elevation contour above the NAVD88 datum, indicating areas where caution is needed in interpreting flood inundation due to coastal processes.
- **Inundation Coverage:** Displays regions in the U.S. that have experimental National Water Center FIM products available, including areas like the Ohio and Mississippi River valleys, the mid-Atlantic, the Pacific Northwest, Puerto Rico, and the Virgin Islands.
- Inundation: Allows users to toggle the selected guidance inundation layer on or off.